




Lockmakers since 1780

Fitting Instructions - BWA2 Wall Anchor

Fig. 1

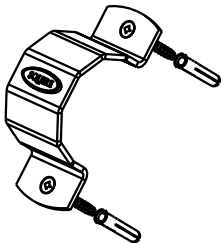

Henry Squire & Sons Limited
Hilton Cross Business Park,
Cannock Road, Featherstone, Wolverhampton, WV10 7QZ

Fitting Instructions

IMPORTANT Wear suitable eye protection and protective clothing during fitting

1. Decide on position of bracket. Then, using the bracket as a template mark the position for the securing holes.
2. Fix onto wall using screws provided. When fixing to brick or concrete use wall plugs provided (Drill holes 7mm diameter). NOTE:- THESE HOLES MUST BE DEEP ENOUGH TO TAKE THE SCREWS.
3. Should added security be required the ball bearings provided may be driven into the pozi drive head of the screws to prevent their removal. (A smear of grease/vaseline applied to ball/slot helps hold the ball in position whilst it is driven into place using a small hammer).

Tel: 01902 308050

Fax: 01902 308051

E-Mail: info@henry-squire.co.uk Website: www.squirelocks.co.uk