




**SQUIRE**

Lockmakers since 1780

## snaplock™ Bracket Fitting Instructions

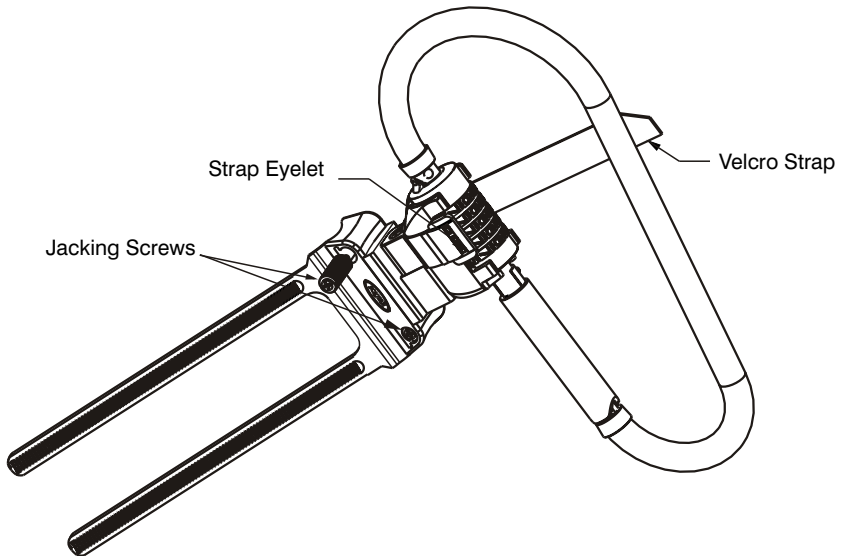

### Instructions

1. Decide a safe and unobtrusive place to fit the Snaplock on the bicycle
2. Remove the lock from the bracket
3. Remove the Jacking screws from the bracket
4. Position the bracket on the bicycle and thread the straps into position
5. Replace the Jacking screws and tighten them using a manual screwdriver.  
Do not use a Powered screwdriver.
6. Place the lock in the bracket and thread the velcro strap through the eyelet and double back the strap to secure. Do not use the bracket without the velcro strap securing the lock!
7. Re-check the positioning of the lock on the bicycle ensuring that it does not impair your ability to control the bicycle.
8. Trim any excess length from the bracket straps ensuring there are no sharp edges.

### Henry Squire & Sons Limited

Hilton Cross Business Park, Cannock Road, Featherstone, Wolverhampton, WV10 7QZ

Tel: 01902 308050

Fax: 01902 308051

E-Mail: [info@henry-squire.co.uk](mailto:info@henry-squire.co.uk)

Website: [www.squirelocks.co.uk](http://www.squirelocks.co.uk)