




Lockmakers since 1780

snaplock™ Recoding Instructions

How to recode the SQUIRE snaplock™

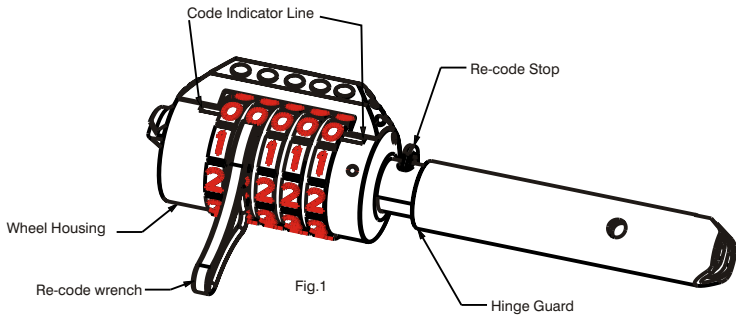

Instructions

1. Position the Re-code stop as shown in Fig.1
2. The lock is pre-set at 00000. Set the wheels to this code and slide the wheel housing up to the Re-code stop. The Re-code stop should now be squeezed between the wheel housing and the hinge guard.
3. Using the Code change wrench provided rotate the wheel to the required number. The number must line up with the Silver indicator line (You should feel the wheel click into position).
4. Repeat instruction 3 for the additional wheels you wish to change.
5. Remove the Re-code stop and slide the wheel housing back and forth between the locked and unlocked positions in order to test the code.
6. Your lock is now ready to use.
7. Remember to scramble the wheels when closing the lock.



Record your code & store in a safe place
IMPORTANT - Lubricate frequently with WD40 or a light oil

Henry Squire & Sons Limited

Hilton Cross Business Park, Cannock Road, Featherstone, Wolverhampton, WV10 7QZ

Tel: 01902 308050

Fax: 01902 308051

E-Mail: info@henry-squire.co.uk

Website: www.squirelocks.co.uk