




Fitting Instructions for GA6 Wall and Floor Anchor

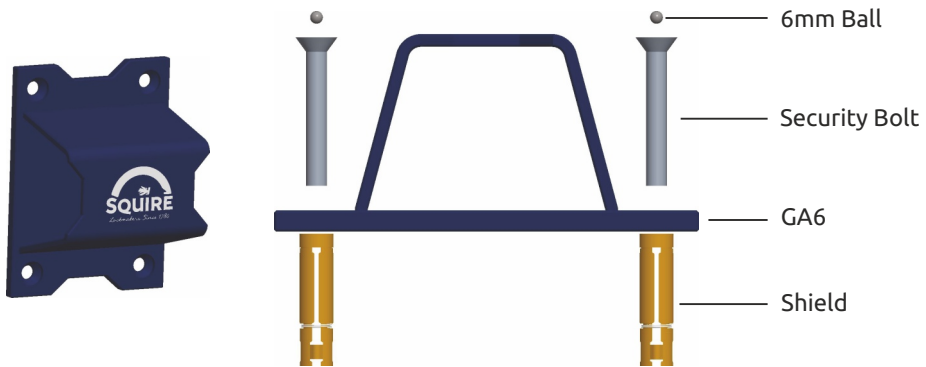

Please note: The unit must be bolted into good solid concrete

1. Using the GA6 as a template, drill through the four holes with a 10mm concrete drill 10mm deep.
2. Remove the GA6, then re-drill the four holes with a 16mm diameter concrete drill 90mm deep.
3. Clear dust from prepared holes in concrete.
4. Unscrew the 4 shields from the security bolt, tap these shields down into the holes using a hammer, making sure that the shield arms point towards the bottom of the holes.
5. Line up your GA6 with the holes, take your security bolts and put a line of glue along the thread.
6. Screw each bolt into the shields and tighten evenly to a torque of 25-30lbs.
7. Take the 4 x 6mm balls and hammer each one into the hexagon socket of the security bolts.

Henry Squire & Sons Limited

Hilton Cross Business Park, Cannock Road, Featherstone, Wolverhampton, WV10 7QZ

Tel: 01902 308050 Fax: 01902 308051 E-Mail: info@henry-squire.co.uk Website: www.squirelocks.co.uk