




## Fitting Instructions for GA1 - Ground Anchor

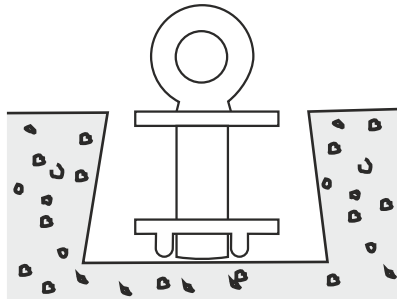

### For maximum security:

- The ANCHOR should be installed into a good quality concrete floor at least 6" deep
  - If possible position the ANCHOR so that the motorcycle is close to the wall.
  - Locate the ANCHOR where the motorcycle will be positioned over the top to minimise attack access.
1. Make an aperture within the floor sufficient to accommodate the ANCHOR. The top plate should be flush with the floor level. Make the hole wider at the bottom to key the installation into place. (see sketch)
  2. Prepare a concrete mix to the recommended instructions and fill in around the ANCHOR. Ensure the top plate is flush with the floor.
  3. Smooth the top surface.
  4. Leave to set. An adequate strength should be achieved within 3 days in dry conditions.

### Henry Squire & Sons Limited

Hilton Cross Business Park, Cannock Road, Featherstone, Wolverhampton, WV10 7QZ

Tel: 01902 308050 Fax: 01902 308051 E-Mail: [info@henry-squire.co.uk](mailto:info@henry-squire.co.uk) Website: [www.squirelocks.co.uk](http://www.squirelocks.co.uk)