


SS50 Combi/SS50C Combi – How to set your code.

1. Adjust wheels so they are read zero in a straight line.



2. Open the lock by pulling the bottom down and the shackle out of the top of the lock.

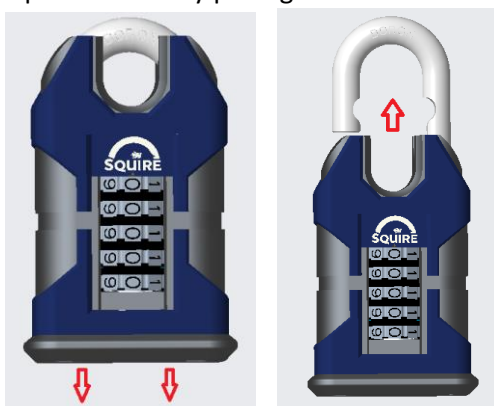

3. On the back of the lock you will now see a hole, using the Allen key supplied, undo grub screw 5 turns (anti-clockwise) and remove allen key, the lock should now pull down approximately 1mm further. If the lock does not pull down any more then undo the grub screw until it does.



4. Adjust the wheels to your preferred 5-digit code and make a note of the code for future reference.
5. Push the bottom of the lock up slightly so that the grub screw can be re-tightened by 5 turns. Do not overtighten the screw, if the lock does not open and close easily then slacken the screw by half a turn and check your numbers are in line.
6. Your lock is now ready for use.

SS50 Combi/SS50C Combi – How to use your lock

1. Adjust the wheels to your code (the factory default code is 00000)



2. Pull the bottom of the lock downwards to reveal an approx. 5mm gap



3. Pull the shackle out of the top of the lock



4. To close the lock, push the shackle down followed by pushing the bottom up
5. Scramble the wheels to hide your code.